
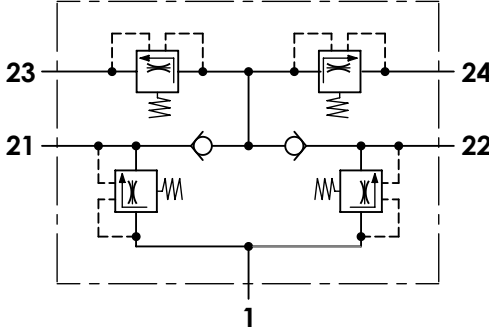
 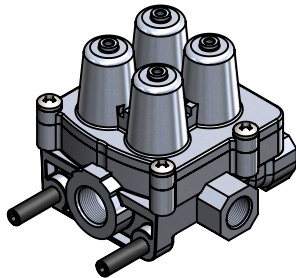

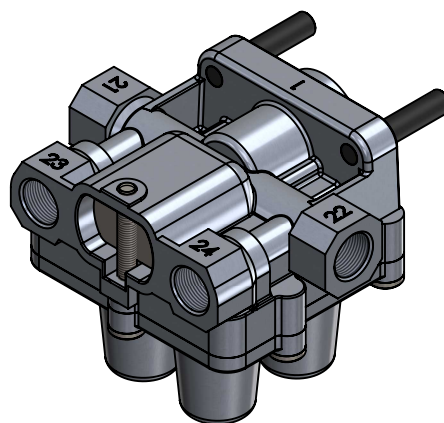
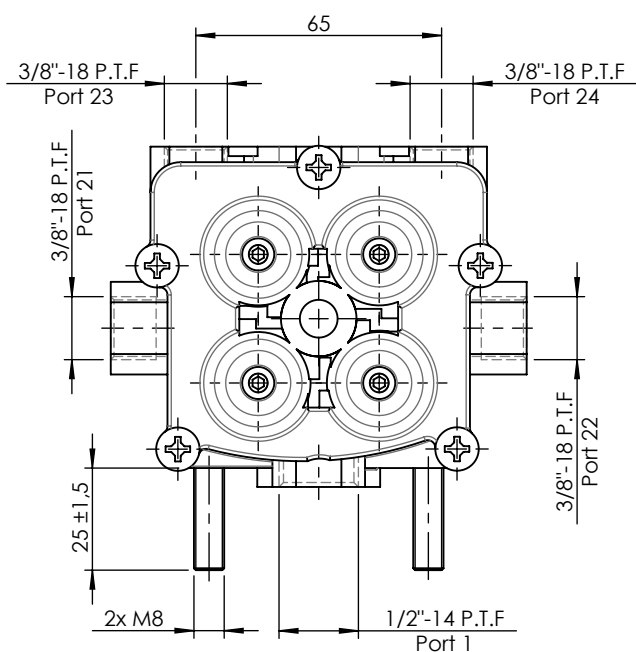
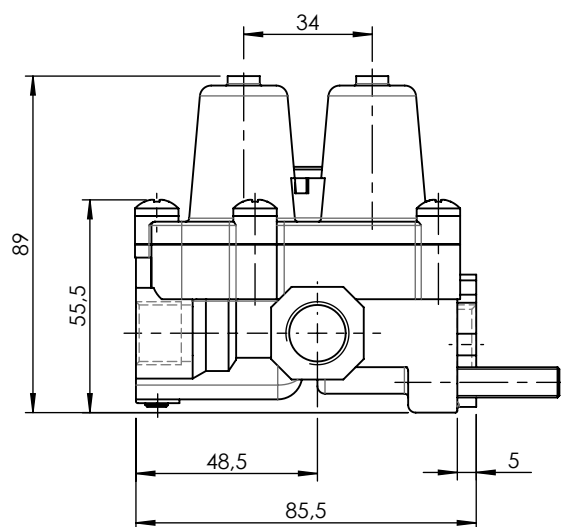
 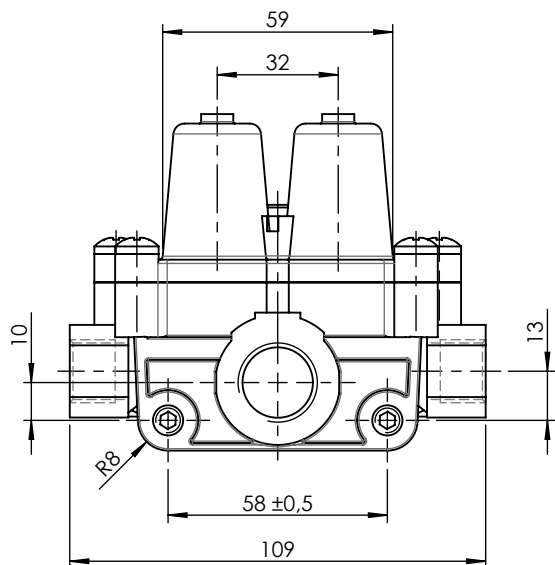


	1	2	3	4																		
Technical sheet / Datos técnicos:																						
A	Part number adaptable to / Referencia adaptable a			9347140370																		
	Operating pressure / Presión de trabajo			max. 13 bar																		
	Permissible medium / Medio de funcionamiento			Air / Aire																		
	Operating temperature range / Rango de temperatura			-40°C to / a +90°C																		
	Weight / Peso			700 gr																		
B																						
C	<table><tr><th>Port / Conexión</th><th>Function / Función</th><th>Thread / Rosca</th></tr><tr><td>1</td><td>Supply / Alimentación</td><td>1/2"-14 P.T.F</td></tr><tr><td>21</td><td>Delivery / Salida</td><td>3/8"-18 P.T.F</td></tr><tr><td>22</td><td>Delivery / Salida</td><td>3/8"-18 P.T.F</td></tr><tr><td>23</td><td>Delivery / Salida</td><td>3/8"-18 P.T.F</td></tr><tr><td>24</td><td>Delivery / Salida</td><td>3/8"-18 P.T.F</td></tr></table>				Port / Conexión	Function / Función	Thread / Rosca	1	Supply / Alimentación	1/2"-14 P.T.F	21	Delivery / Salida	3/8"-18 P.T.F	22	Delivery / Salida	3/8"-18 P.T.F	23	Delivery / Salida	3/8"-18 P.T.F	24	Delivery / Salida	3/8"-18 P.T.F
Port / Conexión	Function / Función	Thread / Rosca																				
1	Supply / Alimentación	1/2"-14 P.T.F																				
21	Delivery / Salida	3/8"-18 P.T.F																				
22	Delivery / Salida	3/8"-18 P.T.F																				
23	Delivery / Salida	3/8"-18 P.T.F																				
24	Delivery / Salida	3/8"-18 P.T.F																				
D	Circuit / Circuito		1	2	3	4																
	Port / Conexión		21	22	23	24																
	Opening pressure / Presión de apertura (bar)		6,2 ⁰ _{-0,3}		6,2 ⁰ _{-0,3}																	
	Closing pressure dynamic / Presión de cierre dinámica (bar)		≥ 4,8		≥ 4,8																	
E	Purpose / Propósito: To distribute clean and dry air from the air dryer to different pneumatic circuits. Ensure pressure in brake circuits in case of leaks or breakage in any circuit. / Distribuir el aire limpio y seco proveniente del secador a los diferentes circuitos neumáticos. Asegurar la presión en los circuitos de freno en caso de fuga o rotura en cualquier circuito.																					
	Installation requirements / Requisitos para la instalación: The protection valve may be installed into the piping in any position. Mounting is accomplished by using two studs M8. / La válvula de protección puede instalarse en las tuberías en cualquier posición. El montaje se realiza mediante dos espárragos M8.																					
F	Modification	4				Drawn																
		3				29/08/13 O.V.																
		2				Checked																
		1	J.S.	02/06/21	Change of sheet format	29/08/13 A.L.																
		nº	Modified	Date	Reason	General Tolerance		Assembly	-													
	Comments				-	Part name	Protection circuit valve															
					Material	ID. Reference	2222419															
					-	Scale: -																
					Review: 1	Sheet 1/2																
	PG/18/02 rev.1 1		2	3	4																	



F	Modification	4				Drawn			F
		3				29/08/13 O.V.			
		2				Checked			
		1	J.S.	02/06/21	Change of sheet format	29/08/13 A.L.			
		nº	Modified	Date	Reason	General Tolerance			
	Comments				ISO 2768 c-K	Part name	Protection circuit valve		
					Material	ID. Reference	2222419		
-					Scale: 1/2		Sheet 2/2		
					Review: 1				
PG/18/02 rev.1 1				2	3	4			