
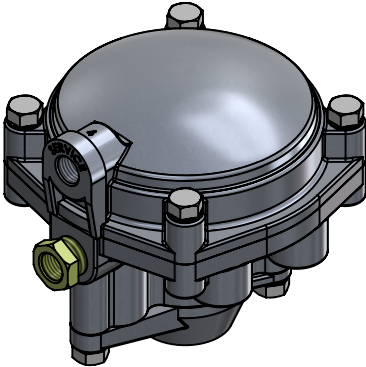


1		2		3		4																													
A	Technical sheet / Datos técnicos:							A																											
B	Part number adaptable to / Referencia adaptable a					281865		B																											
	Operating pressure / Presión de trabajo					max. 8 bar																													
	Predominance / Predominancia					-																													
	Permissible medium / Medio de funcionamiento					Air / Aire																													
	Operating temperature range / Rango de temperatura					-40°C to / a +90°C																													
Weight / Peso					1450 gr																														
																																			
D	<table border="1"> <thead> <tr> <th>Port / Conexión</th> <th>Function / Función</th> <th>Thread / Rosca</th> </tr> </thead> <tbody> <tr> <td>SUPPLY</td> <td>Supply / Alimentación</td> <td>1/4"</td> </tr> <tr> <td>RESERVOIR</td> <td>Reservoir / Calderín</td> <td>3/4"</td> </tr> <tr> <td>SERVICE</td> <td>Control / Pilotaje</td> <td>1/4"</td> </tr> <tr> <td>21</td> <td>Delivery / Salida</td> <td>3/8"</td> </tr> <tr> <td>22</td> <td>Delivery / Salida</td> <td>1/4"</td> </tr> <tr> <td>23</td> <td>Delivery / Salida</td> <td>3/8"</td> </tr> <tr> <td>24</td> <td>Delivery / Salida</td> <td>1/4"</td> </tr> <tr> <td>EXHAUST</td> <td>Exhaust / Escape</td> <td>-</td> </tr> </tbody> </table>							Port / Conexión	Function / Función	Thread / Rosca	SUPPLY	Supply / Alimentación	1/4"	RESERVOIR	Reservoir / Calderín	3/4"	SERVICE	Control / Pilotaje	1/4"	21	Delivery / Salida	3/8"	22	Delivery / Salida	1/4"	23	Delivery / Salida	3/8"	24	Delivery / Salida	1/4"	EXHAUST	Exhaust / Escape	-	D
	Port / Conexión	Function / Función	Thread / Rosca																																
	SUPPLY	Supply / Alimentación	1/4"																																
	RESERVOIR	Reservoir / Calderín	3/4"																																
	SERVICE	Control / Pilotaje	1/4"																																
	21	Delivery / Salida	3/8"																																
	22	Delivery / Salida	1/4"																																
	23	Delivery / Salida	3/8"																																
	24	Delivery / Salida	1/4"																																
	EXHAUST	Exhaust / Escape	-																																
E	Purpose / Propósito: Control of the single-line air braking system of the trailer when the braking system of the towing vehicle is actuating. Triggering of the automatic semitrailer braking with partial or total pressure drop in the supply line. / Control de la línea de freno simple del trailer cuando actúa el sistema de freno del vehículo tractor. Activación del freno automático del semitrailer con total o parcial caída de presión en la línea de alimentación.							E																											
F	Installation requirements / Requisitos para la instalación: Install the trailer brake valve vertically with the exhaust pointing downward. / Instalar la válvula de freno de trailer verticalmente con el escape apuntando hacia abajo.							F																											
F	Modification	4				Drawn		F																											
		3				20/11/20 J.S.																													
		2				Checked																													
		1				20/11/20 O.V.																													
		nº	Modified	Date	Reason	General Tolerance			Assembly	-																									
	Comments					-	Part name	Relay emergency valve																											
						Material	ID. Reference	2991102																											
						-	Scale: -																												
						-	Review: 0		Sheet 1/2																										
	PG/18/02 rev.1 1		2		3		4																												

