

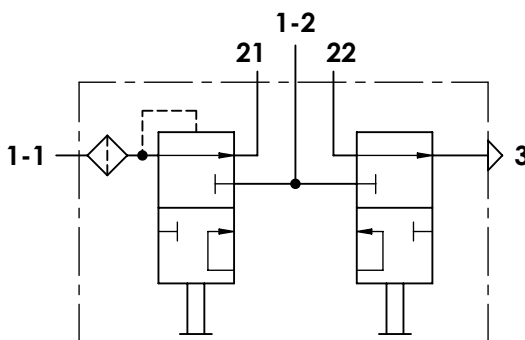
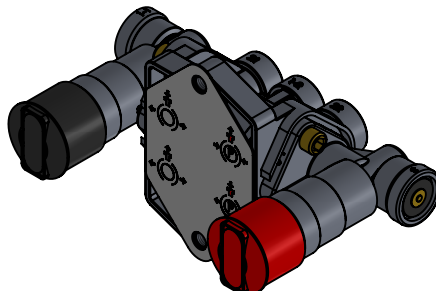

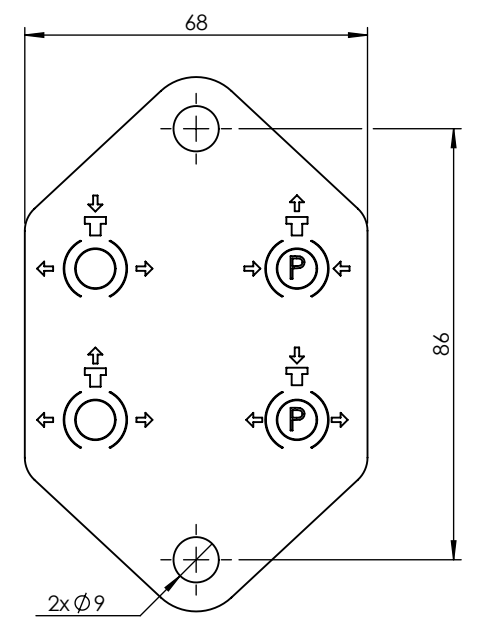
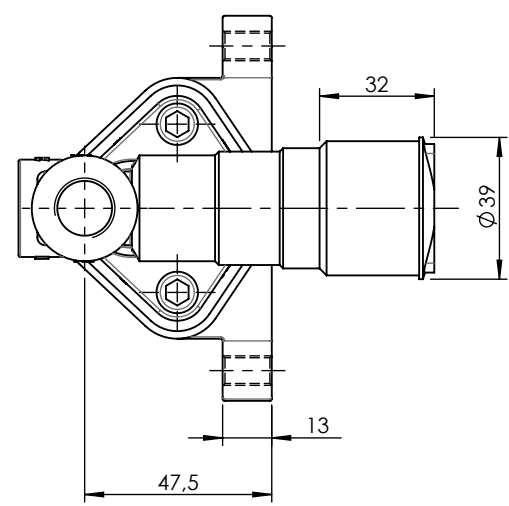
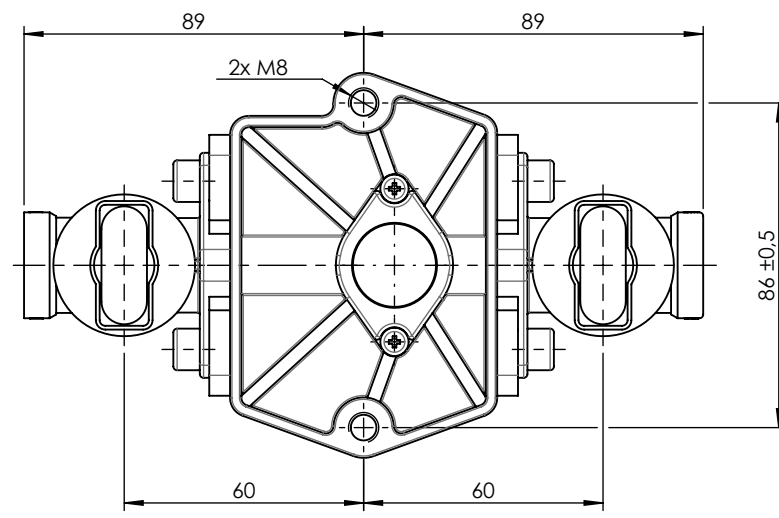
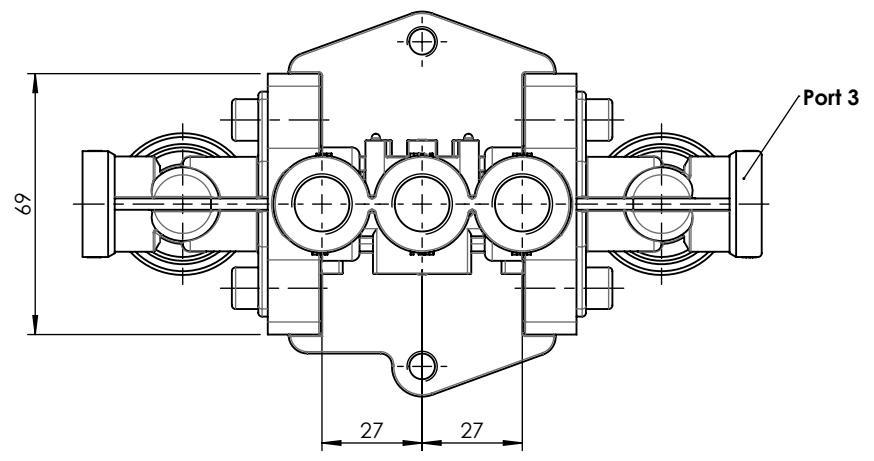


1		2		3		4																			
A Technical sheet / Datos técnicos:																									
Part number adaptable to / Referencia adaptable a						9630010520																			
Operating pressure / Presión de trabajo						max. 8,5 bar																			
Permissible medium / Medio de funcionamiento						Air / Aire																			
Operating temperature range / Rango de temperatura						-40°C to / a +80°C																			
Weight / Peso						600 gr																			
B																									
																									
C																									
<table><tr><th>Port / Conexión</th><th>Function / Función</th><th>Thread / Rosca</th></tr><tr><td>1-1</td><td>Air supply / Alimentación</td><td>M16x1,5</td></tr><tr><td>1-2</td><td>Air reservoir / Calderín de aire</td><td>M16x1,5</td></tr><tr><td>21</td><td>Delivery to relay emergency valve / Salida a válvula relé de emergencia</td><td>M16x1,5</td></tr><tr><td>22</td><td>Delivery to spring brake cylinder / Salida al cilindro de freno</td><td>M16x1,5</td></tr><tr><td>3</td><td>Exhaust / Escape</td><td>-</td></tr></table>								Port / Conexión	Function / Función	Thread / Rosca	1-1	Air supply / Alimentación	M16x1,5	1-2	Air reservoir / Calderín de aire	M16x1,5	21	Delivery to relay emergency valve / Salida a válvula relé de emergencia	M16x1,5	22	Delivery to spring brake cylinder / Salida al cilindro de freno	M16x1,5	3	Exhaust / Escape	-
Port / Conexión	Function / Función	Thread / Rosca																							
1-1	Air supply / Alimentación	M16x1,5																							
1-2	Air reservoir / Calderín de aire	M16x1,5																							
21	Delivery to relay emergency valve / Salida a válvula relé de emergencia	M16x1,5																							
22	Delivery to spring brake cylinder / Salida al cilindro de freno	M16x1,5																							
3	Exhaust / Escape	-																							
D																									
E Purpose / Propósito: Parking and shunting functions used on trailers. Parking brake function supplies and releases pressure to the spring brake chambers. Shunting function allows to apply or release the brake when the trailer is uncoupled of the truck (red coupling head disconnected). / Funciones de parking y maniobra empleadas en trailers. La función de freno de parking alimenta y libera la presión de las cámaras de freno de muelle. La función de maniobra permite aplicar o liberar el freno cuando el trailer está desacoplado del camión (cabezal de acoplamiento rojo desconectado).																									
E Installation requirements / Requisitos para la instalación: Mounting is accomplished with two M8 screws. / El montaje se realiza mediante dos tornillos M8.																									
F																									
Modification	4					Drawn																			
	3					04/12/14 A.U.																			
	2					Checked																			
	1					04/12/14 A.L.																			
	nº	Modified	Date	Reason	General Tolerance	Assembly		-																	
Comments					-	Part name	Release valve																		
					Material	ID. Reference	2227203																		
					-	Scale: -																			
						Review: 0		Sheet 1/2																	
PG/18/02 rev.1 1		2		3		4																			

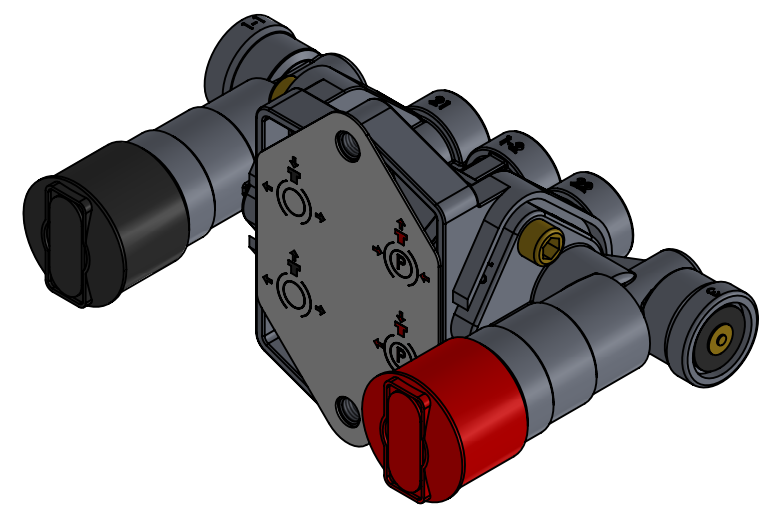

SCALE / ESCALA 2 : 3

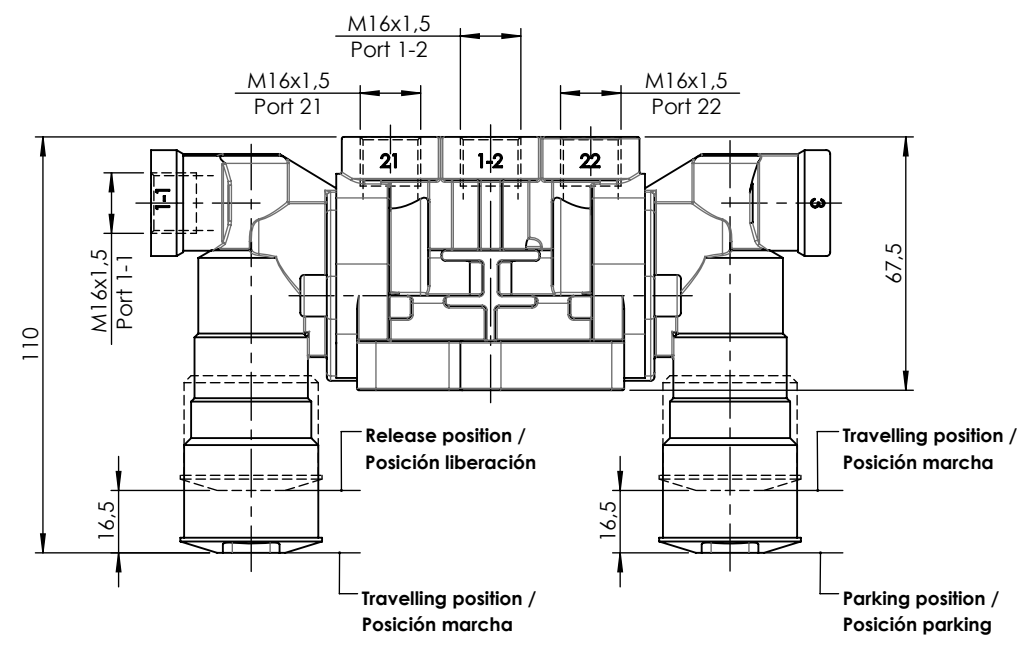

Modification	4				Drawn			
	3				04/12/14 A.U.			
	2				Checked			
	1				04/12/14 A.L.			
	nº	Modified	Date	Reason	General Tolerance	Assembly	-	
Comments					ISO 2768 c-K	Part name	Release valve	
					Material	ID. Reference	2227203	
					-	Scale: 1/2		Sheet 2/2
						Review: 0		